

 

 

 


 
 
 
 
 


 
 
 
 
 
 


 
 
 
 


 








Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	Display		Info
	Play Mode / Tuning Mode		Shift + Play
	Repeat / FM Mode		Text
	Clear		Exit
	EQ		Dual
	Tuner Memory		Eject
	Timer Menu		AV
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Return		Back
	Tool Menu		Menu
	>>I		>>I

Originalfernbedienung    Ersatzfernbedienung

	I<<		I<<
	Folder +		Smart
	Folder -		Media
	Play		Play
	>>		>>
	<<		<<
	Pause		Pause
	Stop		Stop
	Volume +		Vol +
	Volume -		Vol -
	Function +		Ch +
	Function -		Ch -

