































 











 

 
 













Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Power		Power
	VCR		Shift + 4
	DVD		Shift + 2
	TV / VCR		TV/Radio /
	TV / View		Smart / List
	2		2
	4		4
	1 / Tracking -		1
	5		5
	3 / Tracking +		3
	6		6
	7		7
	8		8
	9		9
	Clear		Exit / Cancel / Clear
	0		0

Originalfernbedienung Ersatzfernbedienung

	P.Scan		Blue / Prime Video / Random
	Menu		Menu / Home
	Setup		Setup / OPT /
	Up		Up
	PR+		CH+ / Page+
	PR-		CH- / Page-
	Down		Down
	Left		Left
	Right		Right
	Enter		OK
	Edit		Fav / Marker / PC
	Display		Display / Media
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	<<		<< / Tune-





Originalfernbedienung Ersatzfernbedienung

































 

	>>		>> / Tune+
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	Input		AV / Input / RDS
	Subtitle		Subtitle / EQ
	<l / Slow -		Vol-
	Slow + / l>		Vol+
	Copy		Guide / EPG / -/--
	Angle		Info / Angle
	Rec Speed	+	Shift + Rec / Rec Mode
	Zoom		Zoom / Size
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Search		Red / Netflix / Search
	Audio		Audio / Lang I/II
	Title		Sound / Title
	Timer		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung









 

 









Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Power		Power
	VCR		Shift + 4
	DVD		Shift + 2
	TV / VCR		TV/Radio /
	TV / View		Smart / List
	2		2
	4		4
	1 / Tracking -		1
	5		5
	3 / Tracking +		3
	6		6
	7		7
	8		8
	9		9
	Clear		Exit / Cancel / Clear
	0		0

Originalfernbedienung Ersatzfernbedienung

	P.Scan		Blue / Prime Video / Random
	Menu		Menu / Home
	Setup		Setup / OPT /
	Up		Up
	PR+		CH+ / Page+
	PR-		CH- / Page-
	Down		Down
	Left		Left
	Right		Right
	Enter		OK
	Edit		Fav / Marker / PC
	Display		Display / Media
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	<<		<< / Tune-





Originalfernbedienung Ersatzfernbedienung

	>>		>> / Tune+
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	Input		AV / Input / RDS
	Subtitle		Subtitle / EQ
	< / Slow -		Vol-
	Slow + / >		Vol+
	Copy		Guide / EPG / -/--
	Angle		Info / Angle
	Rec Speed		Shift + Rec / Rec Mode
	Zoom		Zoom / Size
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Search		Red / Netflix / Search
	Audio		Audio / Lang I/II
	Title		Sound / Title
	Timer		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

