 

 

 

 

 

 
 
 




 
 

 

 

 

 

 
 

 




 



 









 
 







**Originalfernbedienung Ersatzfernbedienung**

	Digital		Display / Media
	Yellow/Theater Modes/Info		Yellow / YouTube / Repeat
	Power		Power
	Tv		Shift + 1
	DVD		Shift + 2
	Green/Stereo/[...]		Green / APP / Repeat
	Blue/Delay/Title		Blue / Prime Video / Random
	Red/Center/Audio		Red / Netflix / Search
	Up		Up
	Violet/Level/Came		Fav / Marker / PC
	Tape		Shift + 5
	SAT/CAB		Shift + 0
	Tuner		Shift + 6
	Video/VCR		Shift + 4
	Left/-		Left
	OK		OK
	Right/+		Right





**Originalfernbedienung Ersatzfernbedienung**

	PTY		Text / Goto
	Down		Down
	Menu/RDS		Menu / Home
	Vol+		Vol+
	PR+ />>I		CH+ / Page+
	Vol-		Vol-
	PR- /I<<		CH- / Page-
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Originalfernbedienung Ersatzfernbedienung

	Memo / Clear		Smart / List
	0		0





 

 




 








 

 



 





 

Originalfernbedienung Ersatzfernbedienung









 

 

 

 

 








 



 

 







**Originalfernbedienung Ersatzfernbedienung**

	Digital		Display / Media
	Yellow/Theater Modes/Info		Yellow / YouTube / Repeat
	Power		Power
	TV		Shift + 1
	DVD		Shift + 2
	Green/Stereo/[...]		Green / APP / Repeat
	Blue/Delay/Title		Blue / Prime Video / Random
	Red/Center/Audio		Red / Netflix / Search
	Up		Up
	Violet/Level/Came		Fav / Marker / PC
	Tape		Shift + 5
	SAT/CAB		Shift + 0
	Tuner		Shift + 6
	Video/VCR		Shift + 4
	Left/-		Left
	OK		OK
	Right/+		Right



 



 



 



 

 
 
**Originalfernbedienung Ersatzfernbedienung**

	Down		Down
	Menu/RDS		Menu / Home
	Vol+		Vol+
	PR+ />>I		>>I / Preset+
	PR+ />>I		CH+ / Page+
	Vol-		Vol-
	PR- /I<<		I<< / Preset-
	PR- /I<<		CH- / Page-
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Originalfernbedienung Ersatzfernbedienung

	9		9
	Memo/Clear		Smart / List
	0		0
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze



 

 

 





 


 
 

 

 













Originalfernbedienung Ersatzfernbedienung



















**Originalfernbedienung Ersatzfernbedienung**

	Digital		Display / Media
	Yellow/ThaterMo des/Info		Yellow / YouTube / Repeat
	Power		Power
	TV		Shift + 1
	DVD		Shift + 2
	Green/Stereo[...]		Green / APP / Repeat
	Blue/Delay/Title		Blue / Prime Video / Random
	Red/Center/Audio		Red / Netflix / Search
	Up		Up
	Violet/Level/Came		Fav / Marker / PC
	Tape		Shift + 5
	SAT/CAB		Shift + 0
	Tuner		Shift + 6
	Video/VCR		Shift + 4
	Left/-		Left
	OK		OK
	Right/+		Right

**Originalfernbedienung Ersatzfernbedienung**

	PTY		Text / Goto
	Down		Down
	Menu/RDS		Menu / Home
	Vol+		Vol+
	PR+ />>I		CH+ / Page+
	Vol-		Vol-
	PR- /I<<		CH- / Page-
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Originalfernbedienung    Ersatzfernbedienung

	Memo/Clear		Smart / List
	0		0
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze

Originalfernbedienung    Ersatzfernbedienung








**Originalfernbedienung Ersatzfernbedienung**

	Digital		Display / Media
	Yellow/Theater Modes/Info		Yellow / YouTube / Repeat
	Power		Power
	Tv		Shift + 1
	DVD		Shift + 2
	Green/Stereo/[...]		Green / APP / Repeat
	Blue/Delay/Title		Blue / Prime Video / Random
	Red/Center/Audio		Audio / Lang I/II
	Red/Center/Audio		Red / Netflix / Search
	Up		Up
	Violet/Camera/Le		Fav / Marker / PC
	Tape		Shift + 5
	SAT/CAB		Shift + 0
	Tuner		Shift + 6
	Video/VCR		Shift + 4
	Left/-		Left
	OK		OK

**Originalfernbedienung Ersatzfernbedienung**

	Right/+		Right
	PTY		Text / Goto
	Down		Down
	Menu/RDS		Menu / Home
	Menu/RDS		AV / Input / RDS
	Vol+		Vol+
	PR+ />>I		CH+ / Page+
	PR+ />>I		>>I / Preset+
	Vol-		Vol-
	PR-/I<<		CH- / Page-
	PR-/I<<		I<< / Preset-
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5




**Originalfernbedienung    Ersatzfernbedienung**

	6		6
	7		7
	8		8
	9		9
	Memo/Clear		Smart / List
	0		0
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze

**Originalfernbedienung    Ersatzfernbedienung**