






Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	DVD/CD		Red
	FM/AM Tuner		Green
	Video/V1/V2/V3		Smart
	MD Direct Play		Yellow
	Tape Direct Play		Blue
	System Vol+		Vol +
	System Vol-		Vol -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	10/0		0
>10 button" data-bbox="505 188 538 228"/>	+10		Guide
	Memory Condition		Shift + 1
	Memory Last		Shift + 2
	Search		Shift + TV/R
	CLR		Exit
	Test Tone		Shift + Exit
	Repeat		Shift + Text
	A-B		Shift + Play
	Random		Shift + 6
	Dimmer		Eject
	Program		Sleep
	Top Menu		Shift + Menu
	Set Up DVD		Options
	System		Media
	Sound		Dual
	Return		Back





Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Play		Play
	Pause		Pause
	Stop		Stop
	<</<I		<<
	<I Step/Slow	 + 	Shift + Left
	>>/I>		>>
	Step/Slow I>	 + 	Shift + Right
	I<</Prev.		I<<
	I<< Folder/Group		Ch -
	>>I/Next		>>I
	Folder/Group >>I		Ch +
	Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	Menu System		D. Menu
	Character DISP		Info
	Mute		Mute
	CH Level		Text
	Surround		List
	DSP		Pre Ch
	Audio	 + 	Shift + Dual
	Subtitle		Subt
	Angle		Format
	DVD Disp		3D
	Power Tv	 + 	Shift + Power
	CH+ Tv	 + 	Shift + Ch +
	CH- Tv	 + 	Shift + Ch -
	Vol+ Tv	 + 	Shift + Vol +
	Vol- Tv	 + 	Shift + Vol -
	Input Tv		AV
	Clock/Timer Tv		TV/R

