 

 

 



 



 

 











 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<< Tuning		<< / Tune-
	Tuning >>		>> / Tune+
	I<< Preset		I<< / Preset-
	Preset >>I		>>I / Preset+
	Auto Tune		Sound / Title
	Clock Call		Picture / Format
	Sleep		Sleep / Timer
	AM		TV/Radio /
	Direct		D.Menu / Top
	Memo		Setup / OPT /
	Menu		Menu / Home
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Enter		OK
	Clear		Exit / Cancel / Clear
	Down		Down
	Vol+		Vol+
	Mode		Smart / List
	Vol-		Vol-
	Display		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--





Originalfernbedienung Ersatzfernbedienung

	10/0		0
	Repeat		Green / APP / Repeat
	< Input		Shift + << /
	> Input		Shift + >> /
	Timer		Shift + Sleep / Timer
	Shift		Shift + OK
	DIMM		Shift + Smart / List
	DAB		Shift + Display / Media
	FM		Shift + 6

Originalfernbedienung Ersatzfernbedienung