
 
 
 
 
 
 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	Mode		Dual
	Source		AV
	Prog		Shift + Sleep
	Up		Up
	Down		Down
	>>I		>>I
	Play		Play
	Pause		Pause
	I<<		I<<
	Stop		Stop
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Disp		Info
	Clock		Smart

Originalfernbedienung Ersatzfernbedienung

	Timer/Sleep		Sleep
	Light		TV/R
	EQ		Format
	Max Sound		Back
	Bass Boost		Subt

