


 
 

 



 
 


 



 

 
 



 



 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/DVD		TV/R
	Open/Close		Eject
	Display		Info
	Text		Text
	Rec		Rec
	[≡i]/Zoom		Format




 










 

 


 
 
 

 

 

 
 
 

 


Originalfernbedienung Ersatzfernbedienung

	[≡+]/Repeat		Shift + Text
	Scan >>		>>
	<< Scan		<<
	I<< Skip		I<<
	>>I Skip		>>I
	Play		Play
	Stop		Stop
	Pause/Step		Pause
	Menu/List		Menu
	[≡]		List
	Home		Smart
	Guide		Guide
	Return		Back
	Red/FAV		Red
	Green/Audio		Green
	Yellow/Subtitle		Yellow
	Blue/Timeshift		Blue



 




Originalfernbedienung Ersatzfernbedienung

	Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	PR-		Ch -
	PR+		Ch +
	DVD		D. Menu
	HDD		Media
	Clear		Exit
	Dubbing		Subt
	Search		Shift + TV/R
	Title		Sleep
	Thumbnail		Options
	Random		Shift + Dual
	CHP.ADD		Shift + Subt
	PIP		3D

Originalfernbedienung Ersatzfernbedienung

	Showview		Pre Ch
	Resolution		Shift + Format
	Power Tv		Shift + Power
	AV Tv		Shift + AV
	PR+ TV		Shift + Ch +
	PR- Tv		Shift + Ch -
	Mute Tv		Mute
	Vol+ Tv		Vol +
	Vol- Tv		Vol -
	AV		AV
	Marker		Dual

