



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	Up		Up
	Preset/Album+		CH+ / Page+
	I<<		I<< / Preset-
	I<<		Left
	Play/Pause		Play / Slow
	Play/Pause		Pause / Step / Freeze
	Play/Pause		OK
	>>I		>>I / Preset+
	>>I		Right
	Preset/Album-		CH- / Page-
	Down		Down
	Mute		Mute / Dimmer
	Disp		Display / Media
	Stop		Stop / Hold
	Menu		Menu / Home



 

Originalfernbedienung Ersatzfernbedienung

	Max		Smart / List
	Vol-		Vol-
	Vol+		Vol+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Prog/Clock Set		TV/Radio /
	0		0
	Repeat/Shuffle		Green / APP / Repeat
	Repeat/Shuffle		Blue / Prime Video / Random
	Sleep/Timer		Sleep / Timer





Originalfernbedienung Ersatzfernbedienung



	DSC		Setup / OPT /
	DBB		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	Up		Up
	Preset/Album+		CH+ / Page+
	I<<		I<< / Preset-
	I<<		Left
	Play/Pause		Play / Slow
	Play/Pause		Pause / Step / Freeze
	Play/Pause		OK
	>>I		>>I / Preset+
	>>I		Right
	Preset/Album-		CH- / Page-
	Down		Down
	Disp		Display / Media
	Mute		Mute / Dimmer
	Stop		Stop / Hold
	Menu		Menu / Home





Originalfernbedienung Ersatzfernbedienung

	Max		Smart / List
	Vol-		Vol-
	Vol+		Vol+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Prog/Clock Set		TV/Radio /
	0		0
	Repeat/Shuffle		Green / APP / Repeat
	Repeat/Shuffle		Blue / Prime Video / Random
	Sleep/Timer		Sleep / Timer





Originalfernbedienung Ersatzfernbedienung

	DSC		Setup / OPT /
	DBB		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	Up		Up
	Preset/Album+		CH+ / Page+
	I<<		I<< / Preset-
	I<<		Left
	Play/Pause		Play / Slow
	Play/Pause		OK
	Play/Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	>>I		Right
	Preset/Album-		CH- / Page-
	Down		Down
	Disp		Display / Media
	Mute		Mute / Dimmer
	Stop		Stop / Hold
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Max		Smart / List
	Vol-		Vol-
	Vol+		Vol+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Prog/Clock Set		TV/Radio /
	0		0
	Repeat/Shuffle		Blue / Prime Video / Random
	Repeat/Shuffle		Green / APP / Repeat
	Sleep/Timer		Sleep / Timer





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	Up		Up
	Preset/Album+		CH+ / Page+
	I<<		I<< / Preset-
	I<<		Left
	Play/Pause		Play / Slow
	Play/Pause		OK
	Play/Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	>>I		Right
	Preset/Album-		CH- / Page-
	Down		Down
	Disp		Display / Media
	Mute		Mute / Dimmer
	Stop		Stop / Hold
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Max		Smart / List
	Vol-		Vol-
	Vol+		Vol+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Prog/Clock Set		TV/Radio /
	0		0
	Repeat/Shuffle		Blue / Prime Video / Random
	Repeat/Shuffle		Green / APP / Repeat
	Sleep/Timer		Sleep / Timer



