









 

 



 


 




 

 











Originalfernbedienung Ersatzfernbedienung


 

 
 
 
 
 
 

 
 
 
 
 



 
 


 

 
 



 
 



	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Recall		Back
	Red		Red
	Green		Green
	Yellow		Yellow

Originalfernbedienung Ersatzfernbedienung

	Blue		Blue
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Aspect		3D
	TXT		Text
	Audio		Dual
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	PR+		Ch +
	PR-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Display		Info





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Sleep		Sleep
	Rec		Rec
	Menu		Menu
	Hold		Options
	MIX		Media
	Subpg.		Shift + Subt
	Index		Exit
	Size		Format
	Reveal		Smart
	DTV/Radio		TV/R
	EPG		Guide
	FAV		Pre Ch
	List		List
	PVR Menu		D. Menu
	DTV Subt.		Subt
	I<<		I<<
	>>I		>>I

