









 

 

 



 

 

 





 

 







Originalfernbedienung Ersatzfernbedienung

	Input		AV / Input / RDS
	Power		Power
	Track ID		Zoom / Size
	I<<		I<< / Preset-
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	?/i-Manual		D.Menu / Top
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	3D		Shift + Display / Media
	[+]		Picture / Format
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	Digital/Analog		Shift + Smart / List
	Exit		Exit / Cancel / Clear
	Scene		Smart / List

Originalfernbedienung Ersatzfernbedienung

	Internet Video		Display / Media
	Sync Menu		Shift + Menu /
	Guide		Guide / EPG / -/--
	Up		Up
	[i+]/[?]		Info / Angle
	Return/Back		Back / Return
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Options		Setup / OPT /
	Home		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	[≡]		Text / Goto				
	0		0				
	[...]		Subtitle / EQ				
	Mute		Mute / Dimmer				
	Vol+		Vol+				
	Prog/CH+		CH+ / Page+				
	Vol-		Vol-				
	Audio		Audio / Lang I/II				
	Prog/CH-		CH- / Page-				

