



 

 

 

 

 

 
 




 

 

 

 
 
 
 
 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Cancel		Back
	Audio		Dual
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	Disc/SD		List

Originalfernbedienung Ersatzfernbedienung

	iPod/Radio/Ext-In		TV/R
	Netflix		Media
	<< Search/Slow		<<
	Play		Play
	Search/Slow >>		>>
	I<< Skip/↓		I<<
	Pause		Pause
	Skip >>I↑		>>I
	Stop		Stop
	Status		Info
	X/Exit		Exit
	Option		Options
	Return		Pre Ch
	Internet		Shift + Media
	Home		Smart
	Pop-Up Menu/Top Menu		Menu
	Up		Up





**Originalfernbedienung Ersatzfernbedienung**

	Down		Down
	Right/II>		Right
	<II/Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Sound	 + 	Shift + Dual
	CH Select		Guide
	Surround/Sleep		Sleep
	Skiye		Format
	Power Tv	 + 	Shift + Power
	Av/Input Tv		AV
	Vol+ Tv	 + 	Shift + Vol +
	Vol- Tv	 + 	Shift + Vol -

**Originalfernbedienung Ersatzfernbedienung**