 

 
 


 

 

 
 


 











 

 

 




 







 



 
 
 
 








 


 



 





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Pause		Pause
	Stop		Stop
	Rec		Rec
	Play		Play
	>>		>>
	<<		<<
	>		>>
	I<		I<<
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	CH+		Ch +
	CH-		Ch -
	Home		Smart
	Back		Back
	Source		AV
	III/Adjust		Menu
	Options		Options
	Find		Media
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	1		1
	2		2
	3		3
	4		4
	5		5



