 

 


 
 


 
 
 

 

 

 
 
 

 
 





 





Originalfernbedienung Ersatzfernbedienung

 

 



 

 
 
 
 
 

 
 

 
 
 
 

 
 
 
 
 
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	P+		Ch +
	P-		Ch -
	CH.List		List
	Smart Hub		Smart
	Menu		Menu
	Guide		Guide
	Tools		Options
	Info		Info
	Return		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 C	Yellow	 C	Yellow
 D	Blue	 D	Blue
 TV SOCIAL	Social Tv	 APP MEDIA	Media
 SEARCH	Search	 SEARCH TV/R	TV/R
 3D	3D	 ECO 3D	3D
 E-MANUAL	E-Manual	 E-MANUAL D.MENU	D. Menu
 P.SIZE	P.Size	 PICTURE FORMAT	Format
 AD/SUBT.	AD/Subt.	 AD SUBT	Subt
 <</ <<	<</ <<	 <<	<<
	Pause		Pause
 > >>	> >>	 >>	>>
 REC	Rec	 REC MODE	Rec
 ►	Play	 PLAY MODE	Play
 ■	Stop	 ■	Stop

