


 














 





 

 

 









Originalfernbedienung Ersatzfernbedienung

	On/Standby		Power
	AMP	 + 	Shift + Power
	Dimmer	 + 	Shift + Mute / Dimmer
	Internet Radio	 + 	Shift + 1
	Music Server	 + 	Shift + 2
	Online Music	 + 	Shift + 3
	iPod/USB	 + 	Shift + 7
	M-XPort	 + 	Shift + 4
	Tuner	 + 	Shift + 6
	USB Digital In	 + 	Shift + 8
	OPT/Coax Digital	 + 	Shift + 5
	Favorite		Fav / Marker / PC
	I<</CH-		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>/CH+		>>I / Preset+
	<</Tuning-		<< / Tune-




 






 











 

 


 
Originalfernbedienung Ersatzfernbedienung

	Stop		Stop / Hold
	>>/Tuning+		>> / Tune+
	Input Up		CH+ / Page+
	Mute		Mute / Dimmer
	Vol+		Vol+
	Input Down		CH- / Page-
	M-Dax		Smart / List
	Vol-		Vol-
	Menu		Menu / Home
	Mode		Info / Angle
	Up		Up
	Left		Left
	Enter/Memo		OK
	Right		Right
	Search		Red / Netflix / Search
	Down		Down
	Home		D.Menu / Top





Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/--
	0		0
	Clear		Exit / Cancel / Clear
	Dig.Out		Setup / OPT /
	Random		Blue / Prime Video / Random
	Repeat		Green / APP / Repeat
	Display		Display / Media

Originalfernbedienung Ersatzfernbedienung

