 





 
 
 


 
 
 

 

 
 
 


 
 
 

 

 
 








**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	Source		AV
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Audio/I/II		Dual
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

**Originalfernbedienung Ersatzfernbedienung**

	Radio/+10		Guide
	Recall/Program		Back
	Tv Menu		Menu
	Exit		Exit
	Goto/Text		Text
	Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/Enter		Ok
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Red/DVD Setup		Red
	Green/A-B		Green





Originalfernbedienung Ersatzfernbedienung

	Yellow/Angle		Yellow
	Blue/Repeat		Blue
	Subtitle		Subt
	Play		Play
	Pause/Hold		Pause
	Title/Size		Format
	D.Dis/Reveal		Options
	D.Menu/MIX		D. Menu
	Zoom/Index		Shift + Eject
	I<</FAV		I<<
	>>I/Subpage		>>I
	Stop/Language		Stop
	<</FAV-		<<
	>>/FAV+		>>
	Eject/EPG		Eject
	Media		Media
	Rec		Rec

Originalfernbedienung Ersatzfernbedienung

	[*]		3D
	T-Shift		TV/R

