













 

 

















 

 








 

 

 

 

 

 















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV / Radio		TV/Radio /
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Aspect		Shift + Picture / Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	CH List / 10+		Shift + Guide / EPG / -/-
	CH List / 10+		Smart / List

Originalfernbedienung Ersatzfernbedienung

	0		0
	Recall		Back / Return
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH +		CH+ / Page+
	Vol -		Vol-
	Source		AV / Input / RDS
	CH -		CH- / Page-
	Nicam / Angle		Info / Angle
	Nicam / Angle		Shift + Audio / Lang I/II
	Menu		Menu / Home
	Subtitle		Subtitle / EQ
	i / Display		Display / Media
	Exit		Exit / Cancel / Clear
	Return		Shift + Back / Return
	Up		Up
	Left		Left





Originalfernbedienung Ersatzfernbedienung

	OK		OK
	Right		Right
	Record / Eject		Rec / Rec Mode
	Record / Eject		Eject / Surround
	Down		Down
	EPG / DVD		Setup / OPT /
	EPG / DVD		Guide / EPG / -/--
	Red / Goto DVD		Red / Netflix / Search
	Red / Goto DVD		Shift + Text /
	Green / Slow DVD		Green / APP / Repeat
	Yellow / Repeat		Yellow / YouTube / Repeat
	Yellow / Repeat		Shift + Green / APP /
	Blue / A-B DVD		Blue / Prime Video / Random
	Blue / A-B DVD		Shift + Yellow / YouTube /
	Play		Play / Slow
	Pause / Timeshift		Pause / Step / Freeze
	Stop / FAV		Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

	Stop / FAV		Stop / Hold
	[≡i] / Audio / Index		Audio / Lang I/II
	I<<		I<< / Preset-
	[ /≡] / Text		Text / Goto
	<< / Cancel		<< / Tune-
	[≡x] / Cancel		Shift + Exit / Cancel / Clear
	[≡♦] / Freeze		Shift + Pause / Step /
	Size / DVD Title		Zoom / Size
	Size / DVD Title		Shift + Sound / Title
	>>I		>>I / Preset+
	[≡+] / Hold		Shift + Stop /
	>>		>> / Tune+
	[≡?] / Reveal		Shift + OK
	[≡o] / Subpage / DVD Menu		D.Menu / Top

