

 
 



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	I<<		I<<
	Eject		Eject
	<<		<<
	>>		>>
	>>		>>
	Play		Play
	Pause		Pause
	Stop		Stop
	TV/TXT/Langua		Text
	Cancel/Zoom	 + 	Shift + Eject
	Reveal/Subtitle		3D
	Hold/Menu		Smart
	Size/Angle		Format
	Subpage/Title		Options
	Index/Goto		Media
	Red/Program		Red
	Green/Slow		Green
	Yellow/Repeat		Yellow
	Blue/A-B		Blue
	CH+		Ch +
	CH-		Ch -
	Tv-Menu		Menu
	TV/AV		AV
	Vol+		Vol +
	Vol-		Vol -
	DTV	 + 	Shift + Smart
	DVD Setup		D. Menu
	Exit		Exit
	Display	 + 	Shift + Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left


 
 

 
 
 
 

 



 




Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 + 	Shift + Guide
	Recall		Back
	Picture	 + 	Shift + Format
	Sound	 + 	Shift + Dual
	Nicam/A2		Dual
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep
	Info		Info
	Subtitle		Subt
	Channel List		List
	EPG		Guide
	Tv/Radio		TV/R
	FAV		Pre Ch

