

 


 

 
 
 

 
 
 

 



 
 

 
 

 


 
 





 

 
 
 

 

 

 
 
 
 


 




 

 



 
 
 
 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Power Off	 + 	Shift + Power
	1/BD		1
	2/(SAT/CBL)		2
	3/(DOCK)		3
	Status		4
	BD		5
	Tuner		6
	DVD		7
	DOCK		8
	TV		9
	Game		Guide
	SAT/CBL		0
	V.AUX		Pre Ch
	Band		Red
	Mode		Green
	Shift		Yellow

Originalfernbedienung Ersatzfernbedienung

	Memory		Blue
	Search		TV/R
	Input Mode		AV
	CH+		Ch +
	CH-		Ch -
	Sleep		Sleep
	Audio Delay		Smart
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	Return		Back
	CH Level		Dual
	Surround		3D
	Up		Up
	Down		Down
	Left		Left




**Originalfernbedienung Ersatzfernbedienung**

	Right		Right
	Enter		Ok
	Night		Eject
	Restorer		D. Menu
	Tone		Info
	Test		Options
	Dimmer		List
	< Surround	+	Shift + Left
	> Surround	+	Shift + Right
	up Tuning	+	Shift + Up
	Down Tuning	+	Shift + Down
	Play Ipod		Play
	Pause Ipod		Pause
	Stop Ipod		Stop
	<< Ipod		<<
	>> Ipod		>>
	Repeat Ipod		Text

**Originalfernbedienung Ersatzfernbedienung**

	Random Ipod		Format
	I<< Ipod		I<<
	>>I Ipod		>>I

