 

 




 
 
 
 
 

 
 
 
 

 
 

 
 
 
 

 
 
 

 



 

 

 

 

 



 
 
 
 



 





 


 
 
 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Ambilight		3D
	Source		AV
	Settings		Options
	Top Picks		D. Menu
	Search		TV/R
	TV/Exit		Exit
	Tv Guide		Guide
	Windows		Info
	List		List
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	←		Back
	+		Format




 
 



 
 
 
 
 
 

 




Originalfernbedienung Ersatzfernbedienung

	△		Smart
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Netflix		Media
	≡+		Ch +
	≡-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Originalfernbedienung    Ersatzfernbedienung

	7		7
	8		8
	9		9
	0		0
	Subtitle		Subt
	Text		Text
	Stop		Stop
	Pause		Pause
	Rec		Rec
	<<		<<
	Play		Play
	>>		>>

Originalfernbedienung    Ersatzfernbedienung