


 





 






 






 



















 

 











 

 

 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		MUTE
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	SAT		MEDIA
	FAV		P/C / FAV
	Menu		MENU
	EPG		-/-- / EPG
	Recall		BACK










 


 

Originalfernbedienung Ersatzfernbedienung

	Exit		EXIT
	Up		UP
	Down		DOWN
	Right		RIGHT
	Left		LEFT
	OK		OK
	Vol +		VOL +
	Vol -		VOL -
	CH +		CH +
	CH -		CH -
	TV / Sat		VOD
	Red / TTX		Red (A)
	Green / Sub.T		Green (B)
	Yellow / Zoom		Yellow (C)
	Blue / MP		Blue (D)
	TV / Radio		TV/R
	Audio		Audio





**Originalfernbedienung Ersatzfernbedienung**

	Pause		Pause
	POS		WIDE
	Rec		Rec
	P/N		V-FOR
	Info		INFO
	T/S		SRC
	TTX		TEXT
	Sub.T		Subt.

**Originalfernbedienung Ersatzfernbedienung**