



 

 



 





 



 

 
 
 





 


 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Display		Info
	Status		Smart
	Picture/Size		Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	P--P		Pre Ch
	Audio 1/2		Dual


 

 

 
 

Originalfernbedienung Ersatzfernbedienung

	Skip/[≡?]		Eject
	[≡◇]		3D
	Time		Shift + AV
	Mute		Mute
	Menu		Menu
	Text/[≡]		Text
	Normal		TV/R
	[≡+]		D. Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	PR+		Ch +
	PR-		Ch -
	Vol+		Vol +
	Vol-		Vol -





Originalfernbedienung Ersatzfernbedienung

	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

