

**Originalfernbedienung Ersatzfernbedienung**







 

 
 
 










Power		Power
OK		OK
Up		Up
Down		Down
Right		Right
Left		Left
Back		Back / Return
Vol +		Vol+
Vol -		Vol-
Home / Smart		Menu / Home
3D	+	Shift + 3
Mute		Mute / Dimmer
P +		CH+ / Page+
P -		CH- / Page-
Ratio		Picture / Format
List		Smart / List
Q.Menu		D.Menu / Top

**Originalfernbedienung Ersatzfernbedienung**









 

 
 

Subtitle		Subtitle / EQ
Settings		Setup / OPT /
>>		>>  / Preset+
>>		>> / Tune+
Play		Play / Slow
AD / PIP		Sound / Title
<<		I<< / Preset-
<<		<< / Tune-
Rec		Rec / Rec Mode
Pause		Pause / Step / Freeze
Text		Text / Goto
FAV		Fav / Marker / PC
Exit		Exit / Cancel / Clear
Input		AV / Input / RDS
Blue		Blue / Prime Video / Random
Yellow		Yellow / YouTube / Repeat
Stop / Live TV		Stop / Hold



Originalfernbedienung Ersatzfernbedienung

AV Mode	 + 	Shift + AV / Input / RDS
Green		Green / APP / Repeat
Red		Red / Netflix / Search
0		0
AD		Audio / Lang I/II
TV / PC	 + 	Shift + Fav / Marker / PC
Search	 + 	Shift + Red / Netflix /
App	 + 	Shift + Green / APP /
TV / Radio		TV/Radio /
Guide		Guide / EPG / -/--
Info		Info / Angle
Recent		Sleep / Timer
9		9
8		8
7		7
Live Menu		Display / Media
6		6

Originalfernbedienung Ersatzfernbedienung

5		5
Q.View	 + 	Shift + Display / Media
4		4
Live Zoom		Zoom / Size
3		3
2		2
1		1
T.Opt	 + 	Shift + Setup / OPT / Tools
Energy Saving		Eject / Surround
My APPS	 + 	Shift + Smart / List

