



 

 


 
 

 



 
 

 
 
 




 

 

 
 
 
 
 

 



 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Drive Select		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	*/Delete		3D
	Input Select		AV
	CH/Page Up		Ch +
	CH/Page Down		Ch -
	Prog/Check		Sleep

Originalfernbedienung Ersatzfernbedienung

	Chapter		Pre Ch
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Stop		Stop
	Pause/Pause Live		Pause
	Play		Play
	i/Status		Info
	Exit		Exit
	Option		Options
	Return		Back
	Direct Navigator		List
	Function Menu		Menu
	Guide		Guide
	Up		Up
	Down		Down





Originalfernbedienung Ersatzfernbedienung

	Right/II>		Right
	<II/Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow/Manual Skip -10s		Yellow
	Blue/Manual Skip +60s		Blue
	Rec		Rec
	Rec Mode		Shift + Rec
	Ext Link		Media
	Direct Tv Rec		TV/R
	Text		Text
	[≡◆]/STTL		Subt
	Display		Shift + Info
	Time Slip		Format
	Power Tv		Shift + Power
	AV Tv		Shift + AV

Originalfernbedienung Ersatzfernbedienung

	Vol+ Tv		Vol +
	Vol- Tv		Vol -
	CH+ Tv		Shift + Ch +
	CH- Tv		Shift + Ch -

