


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Step		Format
	3D		3D
	S.Fit		List
	Zoom		Shift + Eject
	Digest		TV/R

Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>
	l<<		l<<
	>>l		>>l
	Stop		Stop
	Play		Play
	Pause		Pause
	Top Menu		Shift + Menu
	Menu		Menu
	Return		Back
	Display		Info
	Clear		Exit
	Mode		AV
	Up		Up
	Down		Down
	Right		Right
	Left		Left



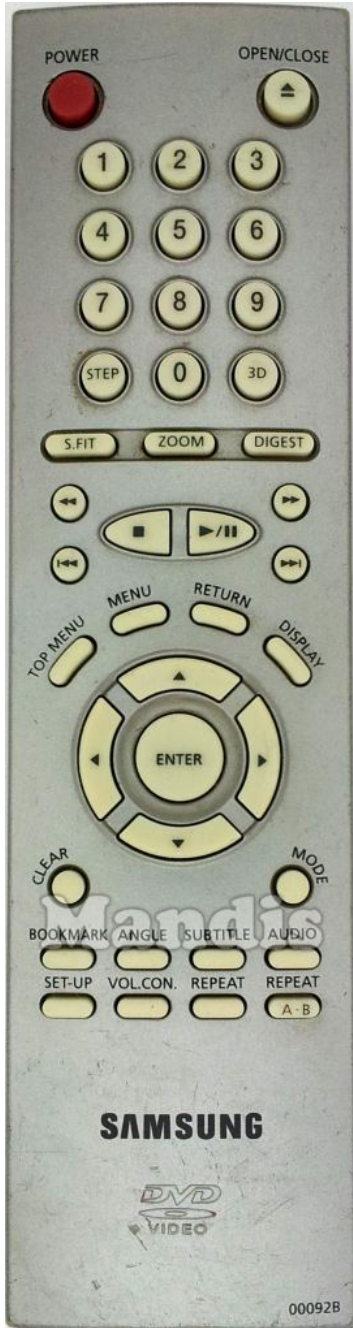

Originalfernbedienung Ersatzfernbedienung

	Enter		Ok
	Bookmark		Guide
	Angle		Media
	Subtitle		Subt
	Audio		Dual
	Set-Up		Options
	Vol.Con		Green
	A-B Repeat		Blue
	Repeat		Text

Originalfernbedienung Ersatzfernbedienung

