 


 

 


 
 

 


 

 

 

 
 
 
 
 

 




 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		MUTE
	TV/HDTV		Red (A)
	Movie		Green (B)
	♪/Music		Yellow (C)
	Photo		Blue (D)
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/Timeshift		0
	16:9/4:3		V-FOR

Originalfernbedienung Ersatzfernbedienung

	Zoom		WIDE
	I<<		First
	>>I		Last
	OK		OK
	Play		Play
	Pause		Pause
	Up		UP
	Down		DOWN
	Right/>>/Sort		RIGHT
	Left/<</Jump		LEFT
	Stop		Stop
	Return		BACK
	Vol+		VOL +
	Vol-		VOL -
	Tv CH+		CH +
	Tv CH-		CH -
	Info		INFO





Originalfernbedienung Ersatzfernbedienung

	[ABC]/Subtitle		Subt.
	Menu		MENU
	→/Goto		P/C / FAV
	* / Setup		VOD
	♪ / Audio		Audio
	Repeat		TEXT
	X/ Shuffle		EXIT
	Tv Out		TV/R
	Title/ Yellow	+	Shift + Subt.
	AV In / Green	+	Shift + SRC
	Function/ Blue		OPT+
	Guide		- / - / EPG
	Bookmark/ Schedu		MEDIA
	Add/ Delete		SRC
	Rec		Rec

Originalfernbedienung Ersatzfernbedienung

