



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Input		AV
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Option		Options
	Guide		Guide
	Menu		Menu
	[≡]/Text		Text
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/List		Ok
	Vol+		Vol +
	Vol-		Vol -

**Originalfernbedienung Ersatzfernbedienung**

	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[i+]		Info
	P:P		Pre Ch
	Ambilight		Smart
	Mode		Media





Originalfernbedienung Ersatzfernbedienung

	<<		<<
	Stop/MHEG		Stop
	Play		Play
	>>		>>
	Rec		Rec
	[...]		Subt
	[1 2]		3D
	[<>]		Format

Originalfernbedienung Ersatzfernbedienung






**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Option		Options
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3
	4		4

**Originalfernbedienung    Ersatzfernbedienung**

	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[i+]		Info
	P:P		Pre Ch
	Ambilight		Smart
	Mode		Media
	<<		<<
	Stop/MHEG		Stop
	Play		Play
	>>		>>
	[...]		Subt
	[12]		3D
	[<>]		Format

 
 
 
 
 
 


 
 








**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Guide		Guide
	Menu		Menu
	[≡]/Text		Text
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/List		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +

**Originalfernbedienung Ersatzfernbedienung**

	PR-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[i+]		Info
	P:P		Pre Ch
	Ambilight		Smart
	Mode		Media
	<<		<<
	Stop/MHEG		Stop



Cancel



Originalfernbedienung Ersatzfernbedienung


	Play		Play
	>>		>>
	Rec		Rec
	[...]		Subt
	[1 2]		3D
	[<>]		Format

Originalfernbedienung Ersatzfernbedienung






**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Option		Options
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/List		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3
	4		4

**Originalfernbedienung Ersatzfernbedienung**

	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[i+]		Info
	P:P		Pre Ch
	Ambilight		Smart
	Mode		Media
	<<		<<
	Stop/MHEG		Stop
	Play		Play
	>>		>>
	[...]		Subt
	[12]		3D
	[<>]		Format

