








 

 













Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer





 

 

 



 

 
 






 

 









Originalfernbedienung Ersatzfernbedienung

	Tv/Radio		Tv/Radio /
	Display		Display / Media
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Mute		Mute / Dimmer
	Vol+		Vol+
	EPG		Guide / EPG / -/--
	CH+		CH+ / Page+
	Vol-		Vol-
	Media		Shift + Display / Media
	Media		Setup / OPT /
	CH-		CH- / Page-


 





 




Originalfernbedienung Ersatzfernbedienung

	Rec		Rec / Rec Mode
	T.Shift		Info / Angle
	I/II/Audio		Audio / Lang I/II
	Size/Aspect		Zoom / Size
	Text		Text / Goto
	Reveal		D.Menu / Top
	Hold		Shift + Stop /
	Subpage		Eject / Surround
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Index/Rec List		Smart / List
	Subtitle		Subtitle / EQ
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I/Mix		>>I / Preset+

Originalfernbedienung Ersatzfernbedienung

	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

