



Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	HDD/DVD		Smart / List
	I<</Prev		I<< / Preset-
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	I>>/Next		I>> / Preset+
	I<</II/I<		I<< / Tune-
	Play		Play / Slow
	I>>/II/I>		I>> / Tune+
	Help		Setup / OPT /
	Rec		Rec / Rec Mode
	Stop Rec		Shift + Stop /
	Info		Info / Angle
	Disc Navigator/Top		D.Menu / Top
	Home Menu		Shift + Menu /
	Guide		Guide / EPG / -/-
	Up		Up





 

 

 





 



 

 

 

 

 

 





Originalfernbedienung Ersatzfernbedienung

	CH+		CH+ / Page+
	CM Back		Fav / Marker / PC
	Left		Left
	Enter		OK
	Right		Right
	CH-		CH- / Page-
	CM Skip		Zoom / Size
	ATV/DTV		TV/Radio /
	Down		Down
	Return/Exit		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Pause Line Tv		Shift + Pause / Step /
	Timer Rec		Sleep / Timer
	Rec Mode		Shift + Rec / Rec Mode



 









 





 





Originalfernbedienung Ersatzfernbedienung

	One Touch		Picture / Format
	O)))/Audio		Audio / Lang I/II
	[...]/Subtitle		Subtitle / EQ
	Camera/Angle		Shift + Info / Angle
	Input Select		AV / Input / RDS
	1		1
	2		2
	3		3
	Menu		Menu / Home
	4		4
	5		5
	6		6
	Display		Display / Media
	7		7
	8		8
	9		9
	+		Sound / Title

Originalfernbedienung Ersatzfernbedienung

	0		0
	Clear		Exit / Cancel / Clear
	Power Tv Control		Shift + Power
	CH+ Tv Control		Shift + CH+ /
	Vol+ Tv Control		Vol+
	Text		Text / Goto
	Input Select Tv Control		Shift + AV / Input / RDS
	CH- Tv Control		Shift + CH- /
	Vol- Tv Control		Vol-
	Tv/DVD		Shift + TV/Radio / Program

