 

 

 
 
 


 


 











 
 
 

 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	Subtitle		Subt
	Info/Menu		Menu
	Disc Menu		D. Menu
	Home		Smart
	Back		Back
	Sleep		Sleep
	Function		AV
	Title/PopUp		Info
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Play		Play
	Pause/Step		Pause
	Stop		Stop
	<< Scan		<<

Originalfernbedienung Ersatzfernbedienung

	Scan >>		>>
	I<< Skip		I<<
	Skip >>I		>>I
	Enter		Ok
	Up/Presets+		Up
	Down/Presets-		Down
	Left/Tuning-		Left
	Right/Tuning+		Right
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue/Mono/Stereo		Blue
	1		1
	2		2
	3		3
	4		4
	5		5



