



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back / Return
	Vol+		Vol+
	Audio/Audio/Lang/ MTS		Audio / Lang I/II
	Exit/Exit		Exit / Cancel / Clear

 


 

 

 

 

 


 
 
 


 
 
 
 

 
 
 


**Originalfernbedienung Ersatzfernbedienung**

	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	LCD Menu		Shift + D.Menu / Top Menu
	Down		Down
	DVB Menu		D.Menu / Top
	Input		AV / Input / RDS
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Info/Display		Info / Angle
	Zoom/P.Ratio		Zoom / Size
	Tv/Radio		TV/Radio /

 





**Originalfernbedienung**   **Ersatzfernbedienung**

	FAV		Fav / Marker / PC
	TTX		Text / Goto
	Pause/Hold/PAUSE		Pause / Step / Freeze
	Cancel/USB/Card		Shift + Exit / Cancel / Clear
	EPG/List		Shift + Guide / EPG / ---
	Stop/Index/STOP		Stop / Hold
	Size		Shift + Zoom /
	Play/PLAY		Play / Slow
	Reveal/REVEAL		Setup / OPT /
	Subtitle/Sub.PG		Subtitle / EQ
	<</FR		<< / Tune-
	Red		Red / Netflix / Search
	>>/FF		>> / Tune+
	Green		Green / APP / Repeat
	I<</Prev		I<< / Preset-
	Yellow		Yellow / YouTube / Repeat
	>>I/Next		>>I / Preset+

**Originalfernbedienung**   **Ersatzfernbedienung**

	Blue		Blue / Prime Video / Random

