 







 

 



 






 

 










 
 




 
 
 






 

 
 
 
 
 




 

 



 
 




Originalfernbedienung Ersatzfernbedienung

	Power Tv		Power
	Power STB	 + 	Shift + Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -

 
 

 
 

 

 




 

 
 


 







 
 

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute
	P+		Ch +
	P-		Ch -
	CH List		List
	Menu		Menu
	Smart Hub		Smart
	Guide		Guide
	Tools		Options
	Info		Info
	Return		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Red		Red





Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue		Blue
	Search		TV/R
	Status		Media
	More		3D
	E-Manual		D. Menu
	Recommend		Format
	AD/Subt		Subt
	>>		>>
	<<		<<
	>>		>>
	<<		<<
	Pause		Pause
	Rec		Rec
	Play		Play
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung

