

 

 
 
 
 
 
 

 


 






 
 

 
 
 

 

 
 




 

 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Source		AV
	P.Mode		3D
	S.Mode		Shift + Dual
	Audio/I-II		Dual
	P.Size		Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0



 



 
 
 
 

 





Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Info		Info
	Exit		Exit
	FAV.CH		Pre Ch
	Sleep		Sleep
	Jump		Options
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Red/D.Setup		Red
	Green/Repeat		Green









Originalfernbedienung Ersatzfernbedienung

ZOOM	Yellow/zoom		Yellow
GOTO	Blue/Goto		Blue
PVR LIST	PVR List		List
TIME SHIFT	Time Shift		Smart
USB/SD	USB/SD		Media
DTV/RADIO	DTV/Radio		TV/R
DVD MENU	DVD Menu		D. Menu
TEXT	Text		Text
SUBTITLE	Subtitle		Subt
GUIDE	Guide		Guide
REC	Rec		Rec
STOP	Stop		Stop
PLAY	Play		Play
PAUSE	Pause		Pause
OPEN/CLOSE	Open/Close		Eject
<<	<<		<<
>>	>>		>>

Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>

