 

 

 

 

 

 

 
 

 

 

 

 

 

 







 
 





 

 


 






 

 

 

 






Originalfernbedienung Ersatzfernbedienung

|   |         |   |               |
|---|---------|---|---------------|
|    | Power   |    | Power         |
|    | 1       |    | 1             |
|    | 2       |    | 2             |
|    | 3       |    | 3             |
|    | 4       |    | 4             |
|    | 5       |    | 5             |
|    | 6       |    | 6             |
|    | 7       |    | 7             |
|    | 8       |    | 8             |
|   | 9       |   | 9             |
|  | List    |  | Smart / List  |
|  | 0       |  | 0             |
|  | Vol+    |  | Vol+          |
|  | Mute/AD |  | Mute / Dimmer |
|  | P+      |  | CH+ / Page+   |
|  | Vol-    |  | Vol-          |
|  | P-      |  | CH- / Page-   |

Originalfernbedienung Ersatzfernbedienung

|   |             |   |                       |
|---|-------------|---|-----------------------|
|    | Home/Recent |    | Menu / Home           |
|    | Up          |    | Up                    |
|    | Guide       |    | Guide / EPG / -/--    |
|    | Left        |    | Left                  |
|    | Wheel Up    |    | >>  / Preset+         |
|    | Right       |    | Right                 |
|    | OK          |    | OK                    |
|    | Wheel Down  |    | << / Preset-          |
|    | Back        |    | Back / Return         |
|   | Down        |   | Down                  |
|  | Exit        |  | Exit / Cancel / Clear |
|  | 3D          |  | Picture / Format      |
|  | Source      |  | AV / Input / RDS      |
|  | *           |  | D.Menu / Top          |
|  | Text        |  | Text / Goto           |
|  | T.Opt       |  | Setup / OPT /         |
|  | Play        |  | Play / Slow           |





Originalfernbedienung   Ersatzfernbedienung

|  |        |  |                             |
|--|--------|--|-----------------------------|
|  | Pause  |  | Pause / Step / Freeze       |
|  | Red    |  | Red / Netflix / Search      |
|  | Green  |  | Green / APP / Repeat        |
|  | Yellow |  | Yellow / YouTube / Repeat   |
|  | Blue   |  | Blue / Prime Video / Random |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |

Originalfernbedienung   Ersatzfernbedienung

|  |  |
|--|--|
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |

