



 




 

 












**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TTX/MIX		Text / Goto
	0		0
	Pre-CH		Back / Return
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+

**Originalfernbedienung    Ersatzfernbedienung**

	Vol-		Vol-
	CH List		Smart / List
	P-		CH- / Page-
	Media.P		Display / Media
	Menu		Menu / Home
	Guide		Guide / EPG / -/--
	Tools		Setup / OPT /
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Return		Shift + Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat




**Originalfernbedienung   Ersatzfernbedienung**

	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	E-Manual		D.Menu / Top
	3D		Shift + 3
	AD/Subt.		Subtitle / EQ
	AD/Subt.		Audio / Lang I/II
	Stop		Stop / Hold
	<</ <<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>/>>		>> / Tune+

**Originalfernbedienung   Ersatzfernbedienung**