 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|----------------|
|  | Power |  | Power |
|  | Source |  | AV |
|  | Mute |  | Mute |
|  | A1 |  | Red |
|  | A2 |  | Green |
|  | A3 |  | Yellow |
|  | A4 |  | Blue |
|  | Retrun/Exit |  | Exit |
|  | Menu |  | Menu |
|  | Sound |  | Dual |
|  | Format |  | Format |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Picture |  | Shift + Format |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|---------|
|  | Freeze |  | Pause |
|  | D1 |  | Options |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | FAV |  | Pre Ch |
|  | D3 |  | TV/R |
|  | CH+ |  | Ch + |
|  | CH- |  | Ch - |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |



