


 

 
 
 
 




 
 

 
 
 



 








 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	DTV		Smart
	Radio		TV/R
	USB		3D
	DVD		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv Guide		Guide

Originalfernbedienung Ersatzfernbedienung

	Recall		Back
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	FAV		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Exit		Exit
	Source		AV
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok





Originalfernbedienung Ersatzfernbedienung

	Aspect		Format
	Sleep		Sleep
	Subtitle		Subt
	Audio		Dual
	Text		Text
	Text/Hold		Options
	Text/DVD Zoom		D. Menu
	Power/Display		Shift + Power
	Rec/DVD Menu		Rec
	I<<		I<<
	>>I		>>I
	Stop		Stop
	Eject		Eject
	<<		<<
	>>		>>
	Play		Play
	Pause		Pause

Originalfernbedienung Ersatzfernbedienung

	Rec List/DVD		List
	Red/Goto		Red
	Green/A-B		Green
	Yellow/Angle/3D		Yellow
	Blue/Repeat		Blue

