 







 
 









 



 

 

 







 

 

 
 
 
 
 
 
 

 

 

 



 
 
 

 
 





 




 






Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Input		AV
	Mute		Mute
	(I)		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[≡]		Text
	P<P		Pre Ch
	◆/[+]		Format
	+/16:9		3D
	PP		Back
	INST		Options
	[≡i]/I-II		Dual
	O		Subt
	?		Guide
	X/(<>)		TV/R
	Red/Picture		Red
	Green/Sound		Green
	Yellow/Timer		Yellow
	Blue/Audio		Blue
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	P+		Ch +





Originalfernbedienung Ersatzfernbedienung

	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

