


**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Text		Text
	[≡?]	 + 	Shift + D. Menu
	Subtitles		Subt
	[≡ ]	 + 	Shift + Format
	[≡o]		3D
	Size		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

**Originalfernbedienung Ersatzfernbedienung**

	Recall		Pre Ch
	Source		AV
	DTV		TV/R
	EPG		Guide
	ESG		Smart
	Radio		Media
	Audio I / II		Dual
	Mute		Mute
	Vol +		Vol +
	Vol -		Vol -
	P +		Ch +
	P -		Ch -
	AV Mode	 + 	Shift + AV
	Surround	 + 	Shift + Dual
	DTV Menu		Options
	DTV Menu		D. Menu
	List		List



