 


 



 
 
 
 
 








 


 

 
 


 
 








**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 +  <b>GUIDE</b>	Shift + Guide
	Recall		Back
	Audio		Dual
	FAV		Pre Ch
	FAV+	 + 	Shift + Ch +

**Originalfernbedienung    Ersatzfernbedienung**

	FAV-	 + 	Shift + Ch -
	P.Mode		Media
	S.Mode		Options
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Input		AV
	Sleep		Sleep
	Aspect		3D
	Info		Info
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left



