



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Zoom		Eject
	Scroll		Format
	OK		Ok
	Play		Play
	Pause		Pause

 
 

 

 

 
 
 



 

 

 
 
 
 
 




 
 
Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	I<<		I<<
	>>I		>>I
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Stop		Stop
	Return		Back
	Info		Info
	[ABC]/Subtitle		Subt
	->/Goto		Pre Ch
	Bookmark		Media
	*/Setup		Smart





Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	X/Shuffle		Exit
	Tv Out		TV/R
	Title		List
	Function		Options
	Repeat		Text
	Guide		Guide
	Rec		Rec
	Capture/Delete		AV
	DTV		Red
	Video		Green
	Audio		Dual
	Photo		Blue
	Angle		3D

