 













 

 

 


 










 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-----------------------------|
|  | Power |  | Power |
|  | Input D/A |  | Shift + AV / Input / RDS |
|  | Tv/Radio |  | TV/Radio / |
|  | Text |  | Text / Goto |
|  | Input Source |  | AV / Input / RDS |
|  | Bright+ |  | Shift + Up |
|  | Bright- |  | Shift + Down |
|  | Ratio |  | Picture / Format |
|  | I/II |  | Audio / Lang I/II |
|  | Simplink |  | Display / Media |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | Stop |  | Stop / Hold |
|  | Play |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|-----------------------|
|  | Rec |  | Rec / Rec Mode |
|  | I<< |  | I<< / Preset- |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | >> |  | >> / Preset+ |
|  | Exit |  | Exit / Cancel / Clear |
|  | Back |  | Back / Return |
|  | Menu |  | Menu / Home |
|  | Info |  | Info / Angle |
|  | Guide |  | Guide / EPG / -/- |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Vol+ |  | Vol+ |
|  | Vol- |  | Vol- |



