







 

 
 
 











 

 



 

 









 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Recall		Pre Ch
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Nicam		Options

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep
	Source		AV
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Info		Info
	Media		Media
	Freeze		Smart
	Aspect		3D
	EPG		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu		Menu





Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	Text		Text
	Play		Play
	Pause		Pause
	Stop/Hold		Stop
	<<		<<
	Size		Format
	>>/Reveal		>>
	I<</Index		I<<
	>>I/Subpage		>>I
	Lang		Dual
	Subtitle		Subt
	Rec		Rec
	R.List		List
	TV/Radio		TV/R
	Timeshift		Back
	Red		Red

Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue		Blue

