



 










 
 

 





 











 
 




 

 









 



 

 
 
 
 
 
 





Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Step		Pre Ch
	Open/Close		Eject
	Display		Info
	Prog		Sleep
	P/N		AV
	Subtitle		Subt
	Angle		Guide
	Search		TV/R
	3		3
	4		4
	1		1
	2		2
	5		5
	6		6
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	Audio		Dual
	Channel		Format
	Stop		Stop
	Play		Play
	Pause		Pause
	Vol+		Vol +
	Vol-		Vol -
	PREV		I<<
	NEXT		>>I
	REW		<<
	FF		>>
	Return		Back
	Menu		Menu
	Setup		Options
	Title		List
	Zoom		Shift + Eject



