





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power Tv	 + 	Shift + Power
	AV		AV / Input / RDS
	Tv/DVD		TV/Radio /
	Open/Close		Eject / Surround
	AV Tv	 + 	Shift + AV / Input / RDS
	1		1
	2		2
	3		3
	PR+ Tv	 + 	Shift + CH+ /
	4		4
	5		5
	6		6
	PR- Tv	 + 	Shift + CH- /
	7		7
	8		8
	9		9

 

 

 
 


 

 

 



 

 

 



 


 
 
 
 

 

Originalfernbedienung Ersatzfernbedienung

	Vol+ Tv		Vol+
	Rec		Rec / Rec Mode
	0		0
	Mute		Mute / Dimmer
	Vol- Tv		Vol-
	<< Scan		<< / Tune-
	Scan >>		>> / Tune+
	I<< Skip		I<< / Preset-
	>>I Skip		>>I / Preset+
	Pause/Step		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	Home		Menu / Home
	PR+		CH+ / Page+
	Up		Up
	Menu/List		D.Menu / Top
	Left		Left



 





Originalfernbedienung Ersatzfernbedienung

	Enter		OK
	Right		Right
	Return		Back / Return
	PR-		CH- / Page-
	Down		Down
	Display		Display / Media
	O)))/Audio		Audio / Lang I/II
	Title		Sound / Title
	Marker		Shift + Fav / Marker / PC
	Clear		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	FAV		Fav / Marker / PC
	Green		Green / APP / Repeat
	Repeat		Shift + Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Subtitle		Subtitle / EQ
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

	Text		Text / Goto
	EPG		Guide / EPG / -/--

