


 
 


 



 
















 




 



 

 






Originalfernbedienung Ersatzfernbedienung



 

	Power		Power
	Eject		Eject
	N / P		Media
	Video		Format
	Intro		Red
	Default		Green
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Goto		Guide
	Zoom		Shift + Eject
	Menu		Menu
	PBC		Smart
	Setup		Options
	OSD		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Title		Blue
	L / R		TV/R
	Prog		Sleep
	Clear		Exit
	Mark		D. Menu
	<<		<<





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	>>		>>
	Play / Pause		Play
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Language		Dual
	Angle		3D
	Sub-T		Subt
	Return		Back
	Repeat		Text
	A-B	 + 	Shift + Subt
	Step		Pause
	Slow	 + 	Shift + Play
	Random		AV
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung

