








 



 

 
 




 



 



 









 

 

 



 





 

 

 
 


 

 

 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	Internet		Smart
	Sleep		Sleep
	Presets		Subt
	Multimedia		Media
	Rec		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	<<		<<
	>>		>>
	Lang		Dual
	[≡]		Pre Ch
	Red		Red
	Green		Green
	Yellow		Yellow

 













 






 

 

 

 

 




Originalfernbedienung Ersatzfernbedienung

	Blue		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		TV/R
	Return		Shift + Back
	Menu		Menu
	Q.Menu		D. Menu
	Back		Back
	Exit		Exit





**Originalfernbedienung    Ersatzfernbedienung**

	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	p-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Wide		Format
	Folder [* ]		Eject
	i		Info
	*/o		Options
	*/o.		3D
	Text		Text
	[]≡		Guide

**Originalfernbedienung    Ersatzfernbedienung**