


 
 


 


 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	USB		Smart
	HDMI		Media
	Open / Close		Eject
	Language		Dual
	Angle		Red
	Subtitle		Subt
	Return		Back
	Repeat		Text
	A-B		Shift + Play
	Step		Ch +
	Slow		Ch -
	PBC		D. Menu
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	Setup		Options

Originalfernbedienung Ersatzfernbedienung

	OSD		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Title		List
	R / L		TV/R
	Play / Pause		Play
	Play / Pause		Pause
	<<		<<<
	I<<		I<<<
	N / P		3D
	Stop		Stop
	>>		>>>
	>>I		>>>I
	Video Mode		Format





Originalfernbedienung   Ersatzfernbedienung

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10		0
	10+		Guide
	Goto		Pre Ch
	Prog		Sleep
	Clear		Exit
	Zoom	+	Shift + Eject
	Menu		Menu

Originalfernbedienung   Ersatzfernbedienung