




 





 

 

 
 

 
 
 


 
 
 



 
 
 
 
 
 

 

 






 
 
 
 

 

 
 

 
 
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Mirroring		Guide
	Setting		Shift + Options
	Netflix		Media
	Home		Smart
	Internet		Shift + Smart

Originalfernbedienung Ersatzfernbedienung

	Pop-Up Menu		D. Menu
	Top Menu		Menu
	Option		Options
	Return		Back
	Up		Up
	Down		Down
	Right/ >		Right
	< /Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	<<		<<
	Play		Play
	>>		>>
	<<		<<



