



**Originalfernbedienung Ersatzfernbedienung**

	Standby		Power
	Backlight		D. Menu
	Setup		Options
	Edit		Exit
	Target		3D
	Repeat		Text
	Subtitle		Subt
	Video Out		Sleep
	Display		Shift + Info
	Zoom		Eject
	Audio/Stream		Dual
	Digest Photo		Menu
	Mode Photo		TV/R
	Slide Time		Media
	Rotate		Back
	Home		Smart
	CH/Sub-Audio		List

**Originalfernbedienung Ersatzfernbedienung**

	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Play		Play
	Pause		Pause
	Stop		Stop
	4:3/16:9		Format
	Source		AV
	1		1
	2		2





**Originalfernbedienung Ersatzfernbedienung**

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Time Search		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	EQ Type		Ch +
	EQ On/Off		Ch -
	Movie		Red
	Music		Green

**Originalfernbedienung Ersatzfernbedienung**

	Photo		Yellow
	File		Blue

