



 
 



















 



 







 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/Radio		TV/R
	←PR		Back
	EPG		Guide
	Menu		Menu
	Info		Info

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	Up/PR+		Up
	Down/PR-		Down
	OK/List		Ok
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	↑		Ch +
	↓		Ch -
	Pause		Pause
	[+]		3D
	FAV		Pre Ch
	UHF		Smart
	PAL/NTSC		Format
	TV/AV		AV
	Red		Red





Originalfernbedienung Ersatzfernbedienung

TXT	Green	B	Green
	Yellow	C	Yellow
	Blue	D	Blue
AUDIO	Audio	SOUND DUAL	Dual
TXT	TXT	REPEAT TEXT	Text
	[...]	AD SUBT	Subt
	Audio L/R	SHIFT + SOUND DUAL	Shift + Dual

Originalfernbedienung Ersatzfernbedienung

